

To provide Steel restroom partitions with the proper care and maintenance, the following instructions must be followed:

- All accessible surfaces should be cleaned regularly with mild liquid soap.
- The surfaces should be wiped and then completely dried.
- When installed in areas with showers, the partitions should get ventilation from the outside to reduce excess humidity.

Do Not Use:

- Abrasive powders, cleaning agents, or scouring pads
- Water closet cleaners
- Tile Cleaners
- Cleaners with more than 1% by volume of ammonia
- Cleaners containing acids and lye
- Solutions containing enzymes

If the above instructions are followed, the restroom partitions should provide years of usage.

FenWall shall not accept responsibility for product failure if the above guidelines are not followed.