

FENWALL'S Sunshade Series

"ECONO" Style


4" or 6" Outriggers with 4" or 6" Air Foils

"ECONO Series Sunshade with aluminum Flat Bar Outriggers and Air Foils.

Product Description:

This form provides the details required to field assemble and install the "Fenwall" "ECONO" Series Shu Shade system.

Fenwall Only suggest anchoring options, it is up to the installer to verify with their Engineer the required attachment details.

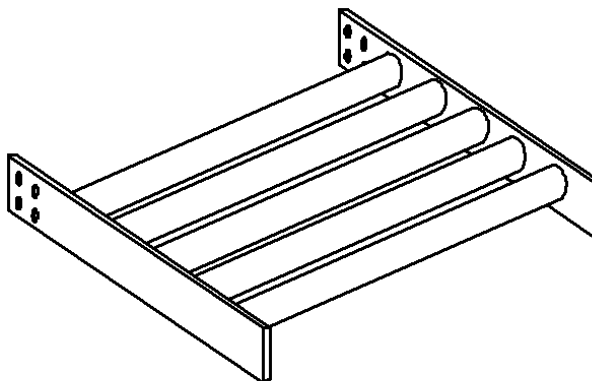

Optional Tool List:

Electrical Cords and Power Source
4' or 6' Level and or Lazar level.

Caulk Gun

General Hand Tools

Pencils and or removable markers


High speed hammer drill

Assorted ratchets. 1/4" - 1/2"

Tape measure

Ladder and or High Reach

Lifting device for raising Sunshade

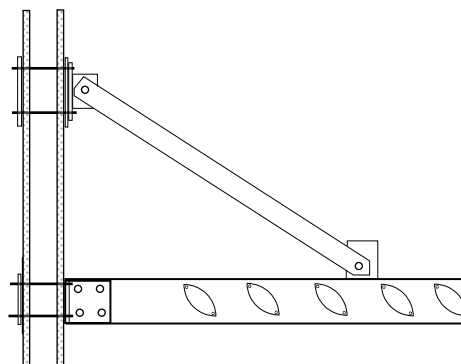

www.fenwalls.com

FENWALL, LLC

13929 Lynmar Blvd

Tampa, FL 33626

(813) 343-5979

Info@fenwalls.com

MANUFACTURER / FABRICATOR OF COMMERCIAL ARCHITECTURAL METALS

FENWALL'S SUNSHADE SERIES "ECONO" STYLE 4" OR 6" OUTRIGGERS WITH 4" OR 6" AIR FOILS "ECONO SERIES SUNSHADE WITH ALUMINUM FLAT BAR OUTRIGGERS AND AIR FOILS.

Step by Step Installation Instructions

- 1) Layout Opening to ensure plum and level conditions.
- 2) If using the Optional Tiebacks, Locate and attach the Upper tieback brackets to the wall. Be sure of adequate support backing by others.
- 3) The same process should be taken for the lower attachment points. Mount the bottom mounting brackets to the substrate with approved anchors.
- 4) While supporting the Shade, attach the rear outriggers to the installed mounting brackets with Manufacturer supplied bolt sets. Check several times during the install for plum and level.
- 5) Wipe all surfaces clean to ensure no damage was caused during the installation.

