



Canopy Installation Guide

Prior to Installation Day:

- Survey the job site to determine the type of lift that will be required, sometimes there are accessibility obstacles or power lines to be aware of.
- Purchase required anchors per the Fastener Schedule.


Tools Needed:

- Ladders – 12'+ and/or extension type
- Lift – Type needed can vary by project weight & location. Manual, Forklift or Crane.
- Tape Measure
- Levels
- Drill – Hammer Drill recommended for concrete/block installations
- Impact Driver
- Drill Bits & Sockets - Per fastener schedule
- Silicon Sealant & Caulking Gun
- String Line - For multiple canopies along a storefront
- Blue Masking Tape- to make temporary, removable notes/markings.
- Soft Cloths & Multi-Cleaner (Windex)

Measurements

Locate and mark the **Center Point** of the canopy.

All measurements can be based from this point. Mark placements of the Wall Brackets.

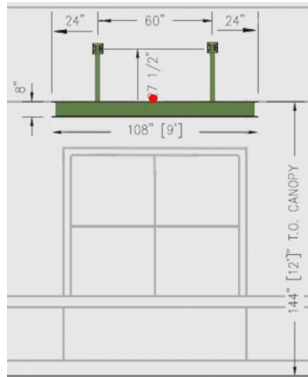

Mount Wall Brackets

Use anchors per Fastener Schedule, ensure brackets are level.

- Drill Pilot Holes
- Drive Anchor Bolts / Fasteners



Attach Supports to Wall Brackets / Tie Backs

Place Bolt Heads from the inside and affix the nut/cotter pin on the outside.



Lift Canopy & Attach Tie Back Supports

- Lift to designated height
- Attach with supplied fasteners



Attach Canopy to Substrate / Building

- Ensure canopy is positioned Level with proper Pitch for drainage.
- Drill Pilot Holes
- Drive Anchor Bolts / Fasteners




Attach Flashing to Substrate / Building

- Position Flashing above but within Canopy Frame
- Attach to substrate with fasteners
- Apply silicon sealant between Flashing & Wall



Attach Scuppers

- Mark for placement of drill holes
- Place Scupper through interior of the canopy so it hangs downward
- Attach with fasteners

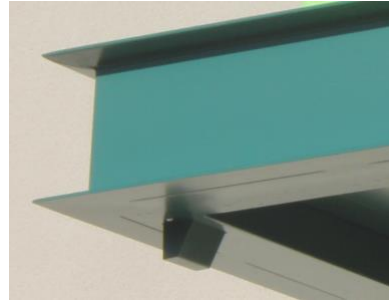

Clean Canopy

- Using Non-abrasive / soft cloths, wipe down the entire unit including Tiebacks and Anchor plates to ensure a blemish free product for turnover.



Touch Up Paint on Exposed Fasteners

